
R CK SOCK Stormwater Filter

Application Drawing

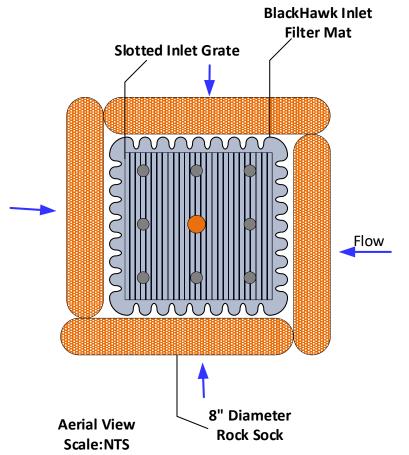

Rock Sock/BlackHawk Inlet Filter Mat - Inlet Protection

- 1. Sweep area around the inlet to remove any debris being careful not to sweep into the inlet opening.
- 2. Place BlackHawk Inlet Filter Mat over the metal grate aligning the outer edge of the magnets with outer edge of the grate/cradle.
- 3. Place Rock Sock around the perimeter of the BlackHawk Filter Mat but not on top, overlap the ends of the Rock Sock.
- 4. Service the BMP 24 hours after every rain event or once every 7 days.

